




Example


1. Place the boot as shown in the illustration. Make sure the boot tip is exact on the line

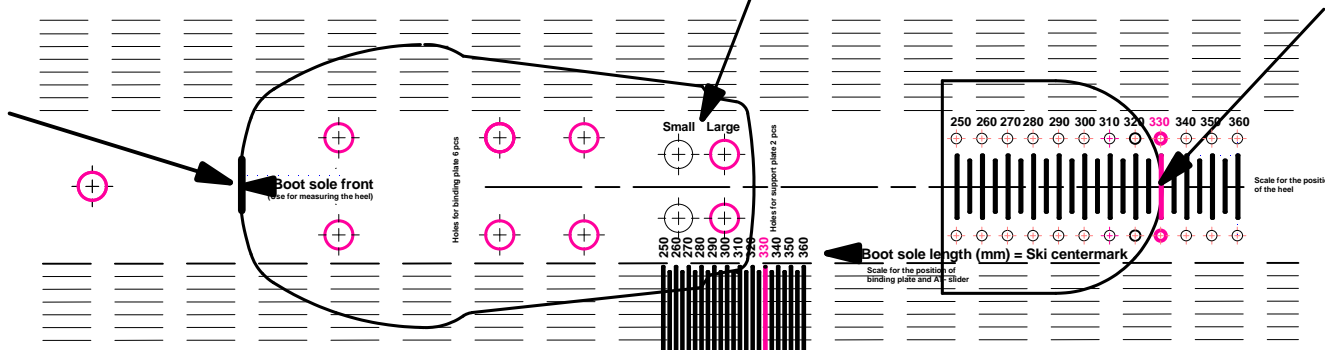



4. Check out to see if you have small or large binding (written on the binding), use then the respective holes

2. Read the value at the back of the heel and use the respective holes for mounting of the heel.



3. Use the value reading in step 2, and match this with the skis centermark.

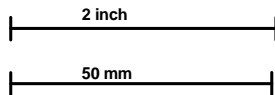





ROTFEFELLA®

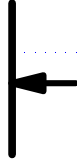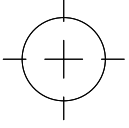

Boot sole front

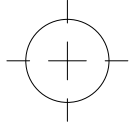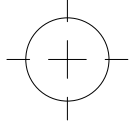





Holes for binding plate 6 pcs

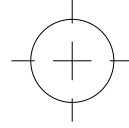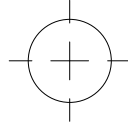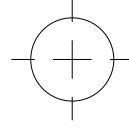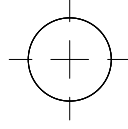

NB!


Small

Large

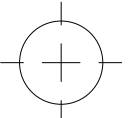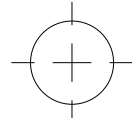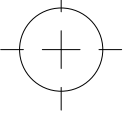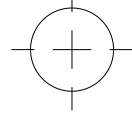



Holes for support plate 2 pcs

250
260
270
280
290
300
310
320
330
340
350


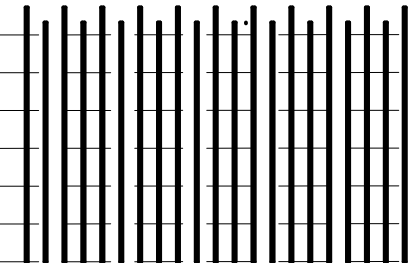




NB!

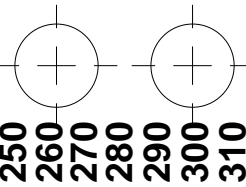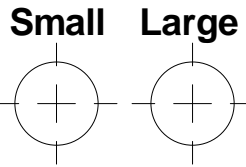

Holes for support plate 2 pcs

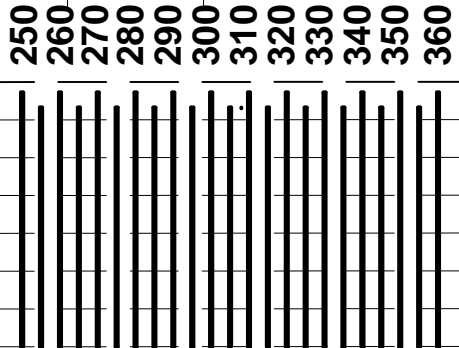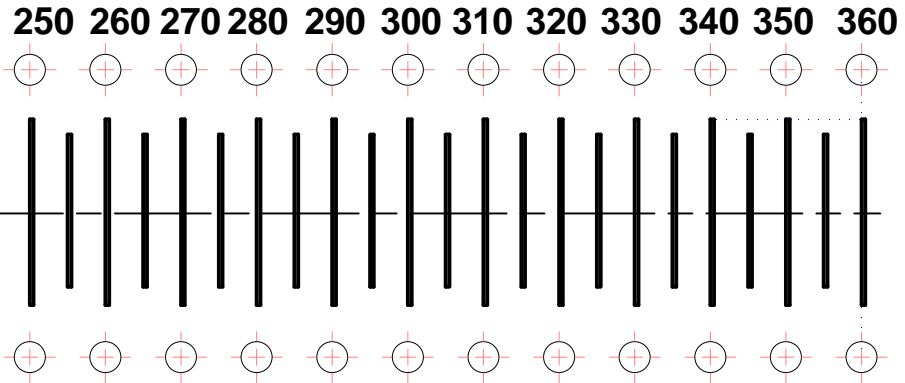

← **Boot sole length (mm) = Ski centermark**

Scale for the position of binding plate and AT- slider